


Wallbarn Bocchetta Slang Installation

EPDM circular outlet with perforated flange for bituminous membranes

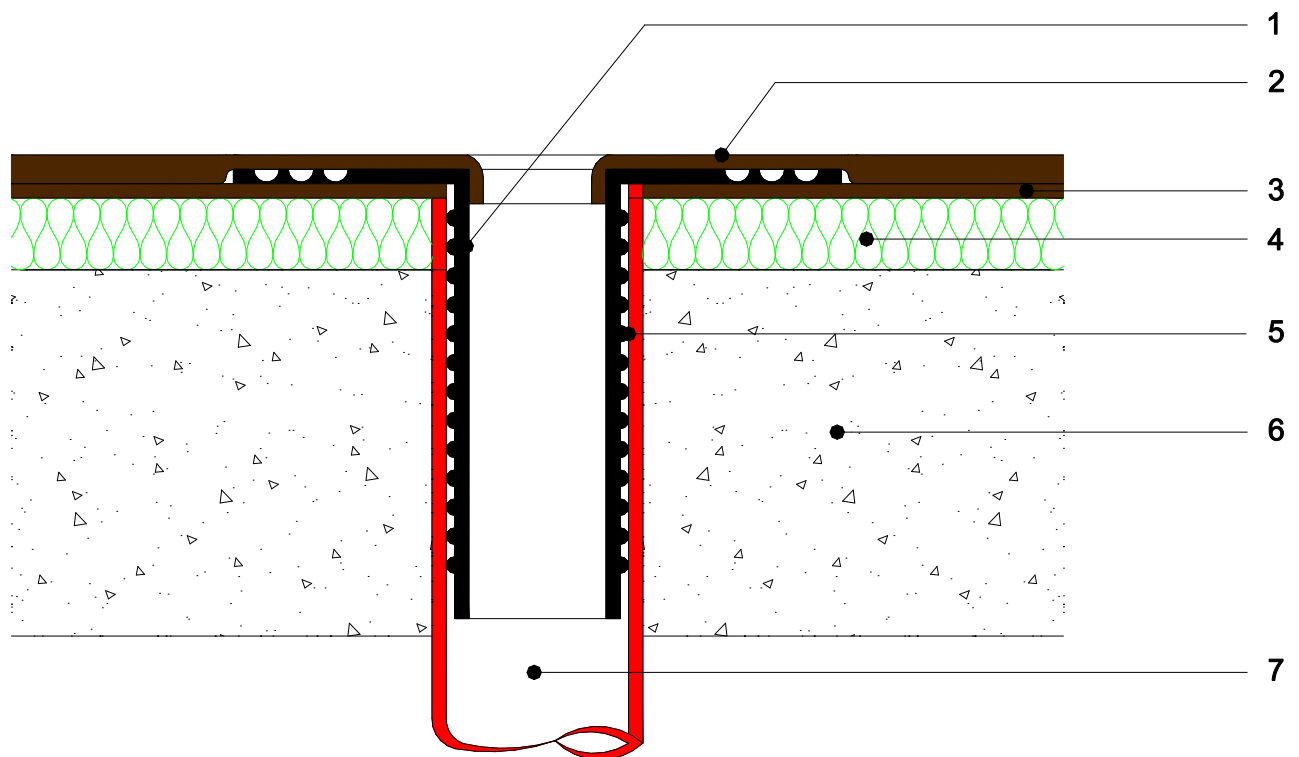

- 1 EPDM BOCCHETTA SLANG
- 2 PATCH OF WATERPROOF MEMBRANE ADHERED TO EXISTING WATERPROOF LAYER
- 3 WATERPROOFING LAYER ABOVE INSUALTION
- 4 INSULATION
- 5 RING GASKETS
- 6 REINFORCED CONCRETE
- 7 RAIN WATER DRAIN