


Wallbarn EPDM Drain Outlet Installation

EPDM circular outlet with ribbed flange

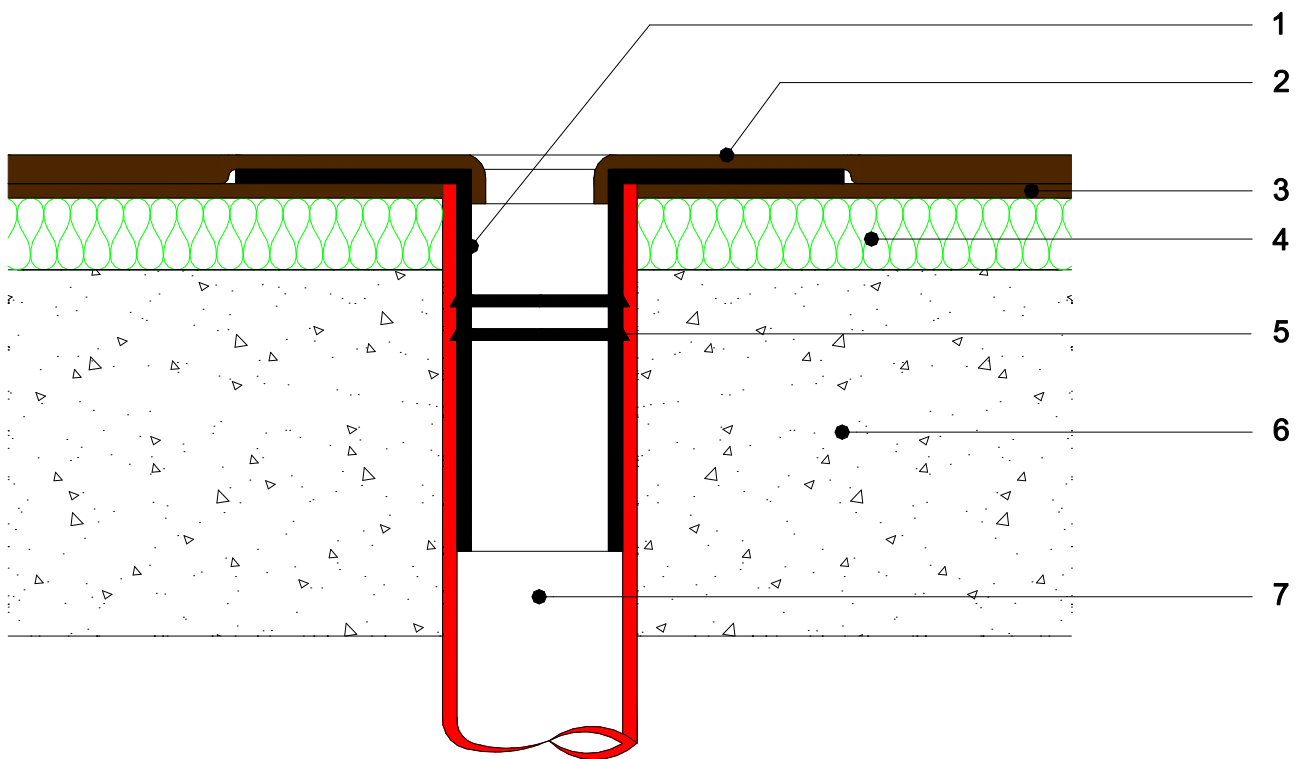

- 1 EPDM DRAIN CONNECTOR
- 2 PATCH OF WATERPROOF MEMBRANE ADHERED TO EXISTING WATERPROOF LAYER
- 3 WATERPROOFING LAYER ABOVE INSULATION
- 4 INSULATION
- 5 RIBS TO HELP ANCHOR SHAFT INTO OUTLET PIPE
- 6 REINFORCED CONCRETE
- 7 RAIN WATER DRAIN