


# Wallbarn Outlet 3 Installation

PVC Corner outlet drain connector on a horizontal plane

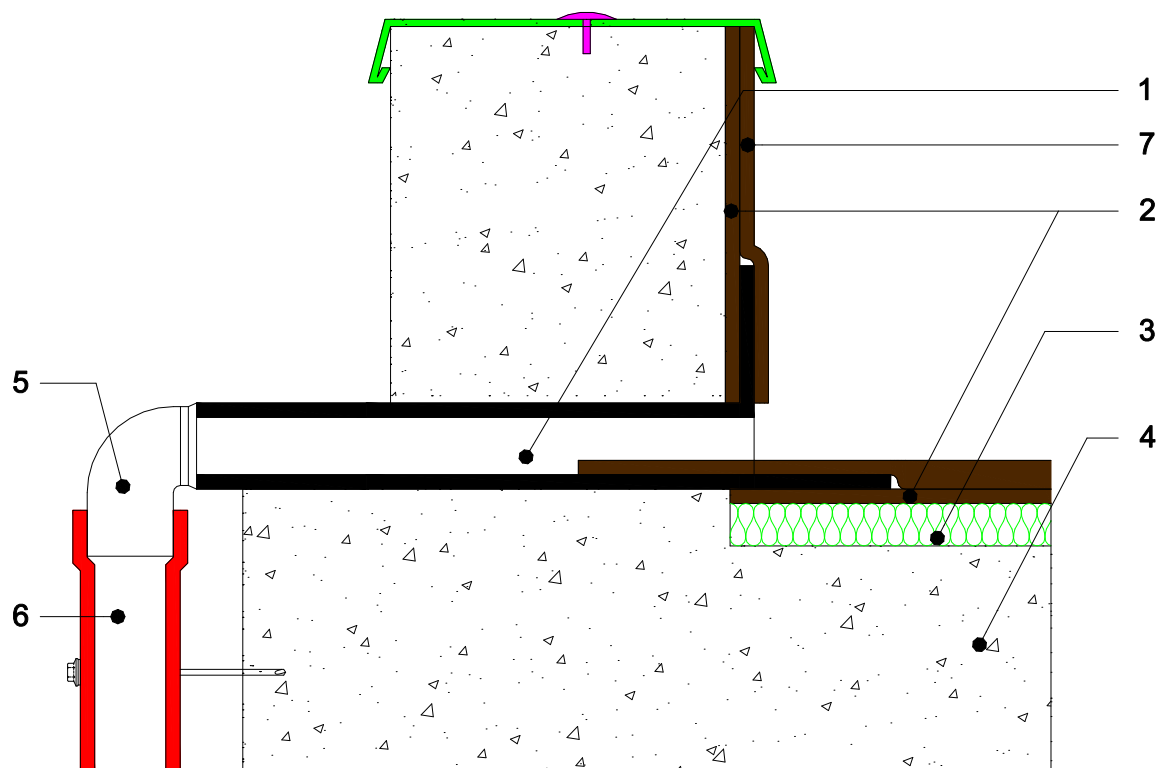

- 1 CORNER OUTLET DRAIN CONNECTOR IN TPE, FIXED WITH SUFFICIENT FALL TO ENSURE WATER DRAINAGE
- 2 PATCH OF WATERPROOFING AROUND OUTLET IN PVC
- 3 INSULATION
- 4 REINFORCED CONCRETE
- 5 BENDS IN HDPE - BY OTHERS
- 6 RAIN WATER DRAIN IN HDPE - BY OTHERS
- 7 PVC WATERPROOFING MEMBRANE HEAT BONDED TO PATCH OVER OUTLET DRAIN CONNECTOR TO ENSURE COMPLETE SEAL AND KEEP OUTLET DRAIN CONNECTOR IN PLACE